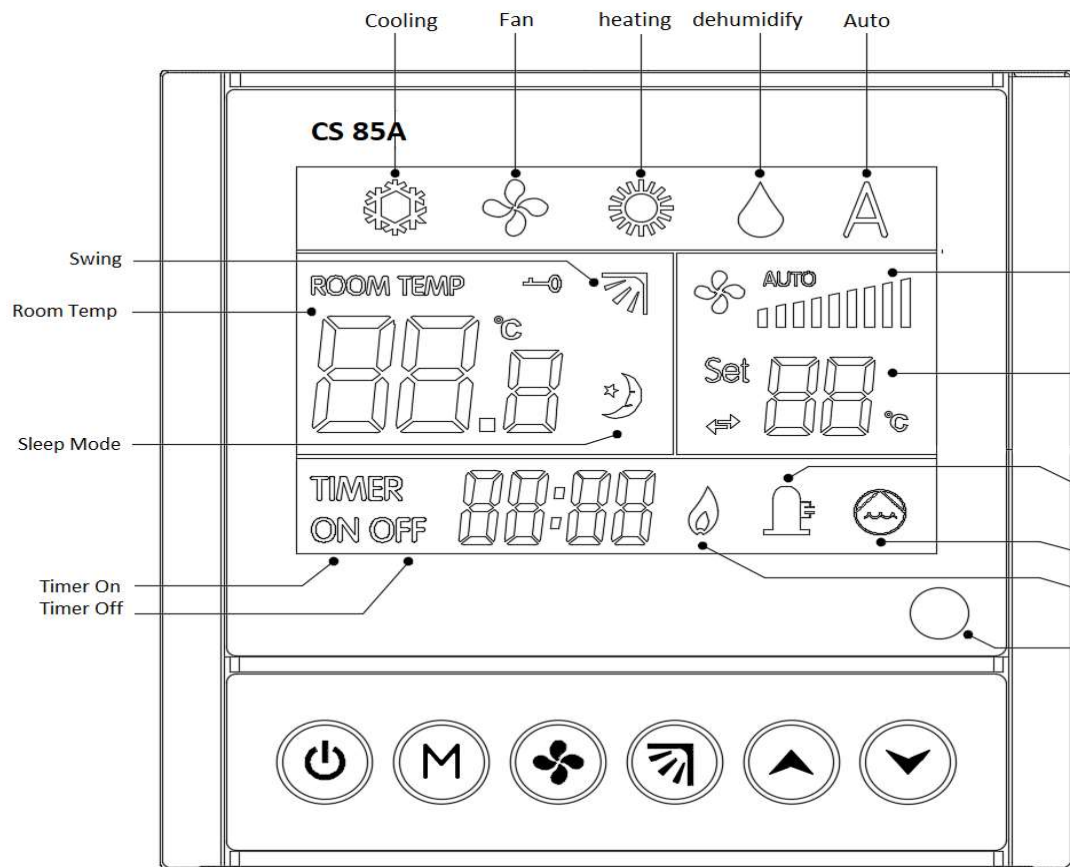


 
 
CS 85A Universal A/C Controller with Wall Mounted Controller



Keypad Operation

button	definition	Function Description
	ON/OFF	Press to Switch On or Off
	Mode	Press to Select Mode: Cool, Heat, Auto, Fan Only or Dehumidfy
	Fan	Press to Select Fan Speed, High, Medium, Low or Auto Mode
	Swing	Press to Start or Stop the Swing Louvre
	Temp Up	Press to Increase Temperature Set Point
	Temp Down	Press to Decrease the Temperature Setpoint

Double Key Functions

Button	Name	Function
	Water Level Switch Digital Input	Press the Mode and Fan Button together for 3 Secs LCD displays DI NC Press +Up or Down button to set "NO", "NC", Press the Power button to Save and Exit. NO = Normally Open, to Switch OFF the Pump NC = Normally closed, to Switch ON the Pump
	AUX HEATER	Press the UP and DOWN Button together to Switch the AUX Heater ON or OFF

• Special character display:

Code	Explanation
E1	Indoor Temperature Sensor Fault
E2	Indoor Coil Sensor Fault
E3	Drain Pump Failure
dF	Coil Defrosting in Heating Mode
EC	Communication Issue

Technical parameters

Voltage: AC185~245V/50HZ

Auto Restart Function

Operating environment:

Temperature -10~+60°C

Humidity: 5%- 90%RH

Temperature Sensor: NTC R(25°C) = 10K±3% B(25/50°C) = 3470

Temperature Setting Range:15 - 30°C

Temperature display Range: 0 - 80°C

Power consumption:≤ 5W

Relay parameter (resistive load)

Name	Parameter
Indoor fan	3A250Vac x 3
Outdoor fan	10A250Vac
Pump	10A250Vac
4 Way Valve	10A250Vac
Compressor	30A250Vac
Heater	15A250Vac